

180° Swivel Bracket for Beyond™ Outdoor Detector



Model: RK350S

EN IT ES FR NL

Installation Instructions

For more information about RISCO Group's branches, distributors and full product line, please visit riscogroup.com

EN Description

The 180° Swivel Bracket has been designed to provide full swivel coverage and enhanced positioning options for the Beyond™ outdoor detector.

Features include:

- Enhanced 180° swivel coverage
- Designed for outdoor installation
- Cover and wall tampers

Installation

Step 1: Preliminary Considerations

Select the mounting location for best coverage of the area that is to be protected by the detector:

- Install the swivel wall bracket ① on a stable mounting platform and at a height of 2.2m
- Install the swivel wall bracket ① in a location where the detector's field of view is clear of any obstacles
- Mount the swivel wall bracket ① so that walking traffic cuts across the detectors beam pattern

Step 2: Mounting the Swivel Bracket

Go to Step 2: *Mounting the Swivel Bracket*.

IT Descrizione

Lo snodo 180° è stato progettato per offrire flessibilità di installazione e migliore copertura dell'area da proteggere per i rivelatori da esterno Beyond™.

Le caratteristiche includono:

- Rotazione a 180° per una maggiore copertura
- Progettato per installazioni in esterno.
- Tamper contro l'apertura e la rimozione.

Installazione

Passo 1: Considerazioni preliminari

Selezionare la posizione di installazione per una migliore copertura dell'area che il rivelatore dovrà controllare:

- Installare la staffa dello snodo ① su di una superficie solida e stabile ad una altezza di 2,2 metri
- Installare la staffa dello snodo ① in una posizione dove il campo di vista del sensore non venga coperto da ostacoli.
- Installare la staffa dello snodo ① in modo che gli eventuali intrusi siano obbligati ad attraversarne l'area di copertura.

Passo 2: Montare la staffa dello snodo

Andare al passo 2: "Montare la staffa dello snodo"

ES Descripción

El Brazo giratorio de 180° ha sido diseñado para aportar completas posibilidades de giro y opciones de posicionamiento mejoradas para el detector Beyond™ de exterior.

Características que incluye:

- Cobertura de giro 180° mejorada
- Diseñado para uso en exteriores
- Tamper de tapa y pared.

Instalación

Paso 1: Consideraciones preliminares

Seleccione la ubicación de instalación para una mejor cobertura del área que debe protegerse con el detector:

- Instale el Brazo giratorio de pared ① sobre un soporte estable y a una Altura de 2.2m
- Instale el Brazo giratorio de pared ① en una ubicación en la que el campo de visión del detector esté libre de cualquier obstáculo.
- Sitúe el Brazo giratorio de pared ① de forma que el sentido normal de paso cruce cortando los haces del patrón de detección

Paso 2: Montaje del Brazo giratorio

Véase Paso 2: *Montaje del Brazo giratorio*.

Componentes utilizados para el montaje:

FR Description

La rotule de fixation 180° a été conçue pour permettre des options de positionnement souples et optimisées pour le détecteur extérieur Beyond™.

Fonctionnalités incluses :

- Rotule 180° pour une meilleure couverture
- Concue pour installation extérieure
- Autoprotections à l'ouverture et l'arrachement

Installation

Etape 1 : Considérations préliminaires

Choisissez l'emplacement de montage pour obtenir la meilleure couverture de la zone à protéger par le détecteur :

- Installez la plaque murale de la rotule ① sur une surface de montage stable à une hauteur de 2,2m
- Installez la plaque murale de la rotule ① à un emplacement où le champ de vision du détecteur est sans obstacle
- Montez la plaque murale de la rotule ① de façon à ce que les mouvements d'un intrus croisent les faisceaux IR du détecteur

Composants utilisés pour le montage :

Etape 2 : Montage de la rotule

Passez à l'étape 2 : *Montage de la rotule*

NL Beschrijving

De 180° Swivel beugel werd ontwikkeld om een totale omgevingsdetectie te garanderen en om de installatie opties te verhogen voor de Beyond™ buitendetector.

Eigenschappen:

- Verbeterde 180° swivel bereik
- Ontwikkeld voor buiten installatie
- Voor- en achterkant sabotage schakelaars

Installatie

Componenten gebruikt voor de montage:

Ga naar *Componenten gebruikt voor montage*

Stap 1: Aandachtspunten

Selecteer de best mogelijke montage positie zodat het detectiebereik van de volledige omgeving bevat welke de detector dient te beveiligen:

- Installeer de swivel muurbeugel ① op een stabiele ondergrond en op een hoogte van 2,2m
- Installeer de swivel muurbeugel ① op een locatie waar er geen obstakels in het zichtsveld staan
- Monter de swivel muurbeugel ① zodat wandelende voorbijgangers het beam detectie patroon doorkruisen

Stap 2: Montage van de Swivel Beugel

Ga naar *Stap 2: Montage van de Swivel beugel*.

Componenets used for Mouting / Componenti usati per l'installazione / Componentes utilizados para el montaje / Composants utilisés pour le montage / Componenten gebruikt voor montage:

1.		EN: Swivel Wall Bracket IT: Staffa di fissaggio a muro dello snodo ES: Placa de montaje para el Brazo giratorio de pared FR: Plaque murale de la rotule NL: Swivel muurbeugel
2.		EN: Swivel Bracket IT: Staffa di fissaggio a muro dello snodo ES: Brazo giratorio FR: Rotule de fixation NL: Swivel beugel
3.		EN: Tapping Screw x 3 IT: Vite autofilettante x 3 ES: Tornillo auto rosante x 3 FR: Vis x 3 NL: Schroef x 3
4.		EN: Screw x 1 IT: Vite x 1 ES: Tornillo x 1 FR: Vis x 1 NL: Schroef x 1
5.		EN: Self-Tapping Screw x 2 IT: Vite autofilettante x 2 ES: Tornillo auto rosante x 2 FR: Vis x 2 NL: Zelf-borende schroef x 2
6.		EN: Swivel Joint IT: Corona girevole ES: Articulación de giro FR: Joint de la rotule NL: Swivel koppeling
7.		EN: Lock Screw IT: Vite di blocco ES: Tornillo de bloqueo FR: Vis de serrage NL: Blokkeer schroef
8.		EN: Swivel Ring IT: Corona girevole ES: Anilla de giro FR: Anneau de la rotule NL: Swivel ring
9.		EN: Locking Nut IT: Dado di blocco ES: Tuerca de bloqueo FR: Ecrou de serrage NL: Blokkeermoeier
10.		EN: Tamper cable IT: Cavoletto tamper ES: Cable de tamper FR: Câble d'autoprotection NL: Sabotage kabel
11.		EN: Swivel Bracket Cover IT: Copertina snodo ES: Cubierta del Brazo giratorio FR: Couvercle de la rotule NL: Swivel beugel Cover

Step 2: Mounting the Swivel Bracket / Passo 2:

Montare la staffa dello snodo / Paso 2: Montaje del Brazo giratorio / Etape 2 : Montage de la rotule / Stap 2: Montage van de Swivel beugel



Fig. 1

1

EN: Using the mounting holes as a template, secure the swivel wall bracket ① to the wall using the 3 Tapping Screws ③.

IT: Usare la staffa di fissaggio a muro ① come dima di foratura e fissarla a muro con 3 viti ③.

ES: Utilizando los orificios de montaje como plantilla, fije la placa de montaje ① a la pared utilizando los 3 tornillos auto rosantes ③.

FR: En utilisant les trous de montage, fixez la plaque murale de la rotule ① au mur avec les 3 vis ③.

NL: Gebruik de montage openingen als sjabloon, waarna u de swivel muurbeugel ① bevestigt op de muur via de 3 schroeven ③.

2
EN: Pull out the external wiring through the swivel wall bracket's center hole.*

IT: Tirare il cavo di collegamento attraverso il foro centrale della staffa.*

ES: Haga pasar los cables por el orificio central.*

FR: Passez le câble dans le trou central de la plaque murale de la rotule.*

NL: Trek de externe kabel door de opening in het midden van de Swivel muurbeugel.*

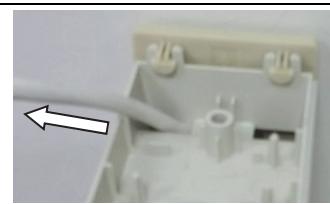


Fig. 2

3

EN: Insert the external wiring through one of the two swivel bracket ② wiring channels and in the direction shown.*

IT: Passare il cablaggio esterno attraverso uno dei due passaggi della staffa ②, verso la direzione mostrata.*

ES: Insertar los cables a través de uno de los canales del Brazo giratorio ②, en la dirección mostrada.*

FR: Insérez le câble dans la rotule de fixation ② par l'un des trous prévus à cet effet, et dans la direction montrée.*

NL: Trek de externe kabel door 1 van de 2 kanalen van de Swivel beugel ② volgens de aangegeven richting.*

4

EN: Mount the swivel bracket ② on the swivel wall bracket as shown.

IT: Montare lo snodo ② sulla sua staffa di fissaggio a muro.

ES: Monte el Brazo giratorio ② en la placa de montaje en pared como se muestra.

FR: Montez la rotule de fixation ② sur la plaque murale comme montré.

NL: Monter de swivel beugel ② op de swivel muurbeugel zoals aangegeven.



Fig. 3

5

EN: Secure the swivel bracket to the wall using the screw ④.

IT: Fissare lo snodo al muro con l'apposita vite ④.

ES: Fije el Brazo giratorio a la pared utilizando el tornillo ④.

FR: Sécurisez la rotule de fixation au mur en utilisant la vis ④ prévue à cet effet.

NL: Bevestig de swivel beugel op de muur via schroef ④.



Fig. 4

6

EN: Using a screwdriver, break the knockout on the top of the detector wall bracket.

IT: Con un cacciavite aprire il foro a sfondare nella parte superiore dello snodo.

ES: Utilizando un destornillador rompa el orificio premechanizado en la parte superior del detector.

FR: A l'aide d'un tournevis, cassez le trou sur le dessus du support mural du détecteur.

NL: Gebruik een schroevendraaier om de uitbrekplaat voor de kabel, op de bovenzijde van de muurbeugel, te verwijderen.



Fig. 5

7

EN: Assemble the swivel joint ⑥ together with the lock screw ⑦ on the detector wall bracket and secure with 2 self-tapping screws ⑤.

IT: Assemblare il blocco snodo ⑥ insieme alla vite di blocco ⑦ sullo snodo e bloccarlo con le due viti autofilettanti ⑤.

ES: Ensamblar la articulación ⑥ junto con el tornillo de bloqueo ⑦ en el soporte del detector y fijelo con 2 tornillos auto rosantes ⑤.

FR: Assemblez le joint de la rotule ⑥ avec la vis de serrage ⑦ sur le support mural du détecteur avec les 2 vis ⑤ fournies.

NL: Assemble

FR: Connectez le câble sur le bornier, et configurez les DIP Switch (*voir le manuel d'installation du détecteur*).*

NL: Sluit de externe kabel aan op de klemmenstroom en stel de DIP switches in zoals benodigd is (*zie Detector's installatie instructies*).

13

EN: Remove the jumper from the tamper connector on the detector and connect the tamper cable ⑩ if a tamper alert is required.

IT: Rimuovere il ponticello dal connettore tamper del rivelatore e connettere il cavo dell'interruttore tamper ⑩, se richiesta la protezione contro le manomissioni. **FR:** Installez le switch d'autoprotection à l'emplacement prévu de la rotule (patte métallique vers le haut) et insérez le câble d'autoprotection dans la vis de serrage, si vous souhaitez utiliser l'autoprotection.

ES: Retire el Puerto del conector de Tamper del detector y conecte el cable del Tamper ⑩, si se requiere supervisión de Tamper.

FR: Enlevez le jumper du connecteur d'autoprotection du détecteur, et connectez le câble d'autoprotection ⑩, si vous souhaitez utiliser l'autoprotection.

NL: Verwijder de jumper van de sabotage connector op de detector en verbind de sabotage kabel ⑩, als een sabotage melding vereist is.



Fig. 10

14

EN: Mount the detector on the detector wall bracket, then adjust the detector on the horizontal axis and fasten the screw to lock the detector.

IT: Rimontare il coperchio del rivelatore sulla base, inserire e stringere le viti per chiudere il rivelatore.

ES: Monte el detector en la placa de montaje en pared, después ajuste el detector en el eje horizontal y fije el tornillo para bloquear el detector.

FR: Montez le détecteur sur son support mural, fermez le, puis serrez la vis du détecteur pour verrouiller le détecteur.

NL: Monteer de detector op de muurbeugel, regel deze af via de horizontale as en draai de schroef aan om de detector vast te zetten.

15

EN: Loosen and tighten the locking nut to adjust the detector on the vertical axis according to the required angle (see table).

IT: Regolare il rivelatore usando il selettori di rotazione angolare allentando e stringendo la vite di blocco in funzione della regolazione (vedere la tabella affianco)

ES: Apriete o afloje la tuerca de bloqueo para ajustar el detector en el eje vertical de acuerdo al ángulo requerido (ver tabla).

FR: Serrez et desserrez l'écrou de serrage pour ajuster le positionnement du détecteur (voir le tableau suivant pour déterminer la couverture selon l'inclinaison).

NL: Draai de blokkeer moer los en regel de detector af via de verticale as volgens de vereiste hoek (zie tabel).

Mounting height / Altezza di montaggio / Altura de montaje / Hauteur de montage / Montage hoogte [m]	Swivel Angle / Angolo snodo / Ángulo de giro / Angle de la rotule / Swivel hoek [°]	Distance / distanza / Distancia / Distance / Afstand [m]
1.8	0	10
	5	7
	10	5
2.2 (optimal)	0	12
	5	8
	10	6
2.5	0	N/A
	5	10
	10	7
2.7	0	N/A
	5	10
	10	7



Fig. 11

16

EN: When the two markings are aligned, the swivel angle is 0°. Movement in either vertical direction of: 1 increment provides swivel angle of 5°; 2 increments provides swivel angle of 10°.

IT: Quando i due riferimenti sono allineati, l'angolo dello snodo è 0°. Muovendo verticalmente lo snodo di uno scatto l'angolo dello stesso diventa 5° e muovendolo di 2 scatti diventa di 10°.

ES: Cuando las dos marcas están alineadas, el ángulo de giro es 0°. Un movimiento vertical, en cualquier sentido, de: 1 incremento varía el ángulo en 5°; 2 incrementos varía el ángulo en 10°.

FR: Quand les 2 marques sont alignées, l'angle de la rotule est de 0°. Un mouvement d'un cran correspond à une inclinaison de 5°. 2 crans correspondent à un angle de 10°.

NL: Wanneer de twee markeringen uitgelijnd zijn, is de swivel hoek 0°. Verplaatsen in vertical richting van: 1 stap geeft een swivel hoek van 5°; 2 stappen geeft een swivel hoek van 10°.

17

EN: Perform a walk-test (see the Detector's Installation Instructions).

IT: Effettuare una prova di movimento (vedere le Istruzioni di Installazione del Rivelatore).

ES: Realice una prueba de paseo (véase Instrucciones de Instalación del Detector).

FR: Réalisez un test de marche (voir le manuel d'installation du détecteur).

NL: Voer een looptest uit (zie de detector's installatie instructies).



Fig. 12

18

EN: Once the installation is complete install the swivel bracket cover (11) and fasten the screw to lock the cover.

IT: Non appena l'installazione è stata terminata rimontare il coperchio della staffa di fissaggio (11) e inserire la vite di bloccaggio del coperchio.

ES: Una vez que la instalación se ha completado, instale el cubierta del Brazo giratorio cover (11) y ajuste el tornillo para fijar la tapa.

FR: Une fois l'installation terminée, installez le couvercle de la rotule (11) et fixez le en serrant la vis.

NL: Zodra de installatie voltooid is, installeer de Swivel beugel Cover (11) en draai de schroef vast om de kap te vergrendelen.

* Not applicable for wireless model / Non applicabile al modello radio / No aplicable a modelo inalámbrico / Non applicable pour le modèle sans fil de détecteur / Niet beschikbaar op het draadloze model.

Ordering Information / Informazioni sull'ordine / Información para pedidos / Information de commande / Bestelinformatie

RA350S00000A	180° Swivel for Beyond Outdoor detector / snodo 180° per Beyond rilevatore esterno / Brazo Giratorio 180° para detector Beyond™ de Exterior / Rotule de fixation 180° pour le détecteur extérieur Beyond / 180° Swivel voor de Beyond buitendetector
--------------	--

RED Compliance Statement:

Hereby, RISCO Group declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. For the CE Declaration of Conformity please refer to our website: www.riscogroup.com.

Dichiarazione di Conformità RED:

La sottoscritta RISCO Group, dichiara sotto la propria responsabilità che questo prodotto è conforme ai requisiti essenziali e alle altre rilevanti disposizioni della Direttiva Europea 2014/53/EU.

Per le Dichiarazioni di Conformità CE, visitate il nostro sito web: www.riscogroup.com.

Declaración de Conformidad RED :

Por la presente, RISCO Group declara que este equipo cumple con los requisitos esenciales y otras disposiciones relevantes de la Directiva 2014/53/EU. Para la Declaración de Conformidad CE, por favor diríjase a nuestra web: www.riscogroup.com.

Rapport de Conformité de RED:

Par la présente, RISCO Group, déclare cet équipement est en conformité aux conditions essentielles et à d'autres dispositions appropriées de la directive 2014/53/EU.

Vous pouvez trouver la copie complète de la déclaration de conformité à la directive 2014/53/EU sur notre site web, à l'adresse suivante : www.riscogroup.com.

RED Compliance Statement:

RISCO Group bevestigt dat dit product in lijn is met de essentiële verplichtingen en andere belangrijke clausules van de 2014/53/EU Directieven. Voor de conformiteit verklaring zie onze website: www.riscogroup.com

Standard Limited Product Warranty ("Limited Warranty")

RISCO Ltd. ("RISCO") guarantee RISCO's hardware products ("Products") to be free from defects in materials and workmanship when used and stored under normal conditions and in accordance with the instructions for use supplied by RISCO, for a period of (i) 24 months from the date of delivery of the Product (the "Warranty Period"). This Limited Warranty covers the Product only within the country where the Product was originally purchased and only covers Products purchased as new. **Contact with customers only.** This Limited Warranty is solely for the benefit of customers who purchased the Products directly from RISCO or from an authorized distributor of RISCO. RISCO does not warrant the Product to consumers and nothing in this Warranty obligates RISCO to accept Product returns directly from end users who purchased the Products for their own use from RISCO's customer or from any installer of RISCO, or otherwise provide warranty or other services to any such end user directly. RISCO's authorized distributor or installer shall handle all interactions with its end users in connection with this Limited Warranty. RISCO's authorized distributor or installer shall make no warranties, representations, guarantees or statements to its end users or other third parties that suggest that RISCO has any warranty or service obligation to, or any contractual privy with, any recipient of a Product.

Remedies. In the event that a material defect in a Product is discovered and reported to RISCO during the Warranty Period, RISCO shall accept return of the defective Product in accordance with the below RMA procedure and, at its option, either (i) repair or have repaired the defective Product, or (ii) provide a replacement product to the customer.

Return Material Authorization. In the event that you need to return your Product for repair or replacement, RISCO will provide you with a Return Merchandise Authorization Number (RMA#) as well as return instructions. Do not return your Product without prior approval from RISCO. Any Product returned without a valid, unique RMA# will be refused and returned to the sender at the sender's expense. The returned Product must be accompanied with a detailed description of the defect discovered ("Defect Description") and must otherwise follow RISCO's then-current RMA procedure published in RISCO's website at www.riscogroup.com in connection with any such return. If RISCO determines in its reasonable discretion that any Product returned by customer conforms to the applicable warranty ("Non-Defective Product"), RISCO will notify the customer of such determination and will return the applicable Product to customer at customer's expense. In addition, RISCO may propose and assess customer a charge for testing and examination of Non-Defective Product.

Entire Liability. The repair or replacement of Products in accordance with this Limited Warranty shall be RISCO's entire liability and customer's sole and exclusive remedy in case a material defect in a Product is discovered and reported as required herein. RISCO's obligation and this Limited Warranty are contingent upon the full payment by customer for such Product and upon a proven weekly testing and examination of the Product functionality.

Limitations. This Limited Warranty is the only warranty made by RISCO with respect to the Products. The warranty is not transferable to any third party. To the maximum extent permitted by applicable law, this Limited Warranty shall not apply and will be void if: (i) the conditions set forth above are not met (including, but not limited to, full payment by customer for the Product and a proven weekly testing and examination of the Product functionality); (ii) if the Products or any part or component thereof: (a) have been subjected to improper operation or installation; (b) have been subject to neglect, abuse, willful damage, abnormal working conditions, failure to follow RISCO's instructions (whether oral or in writing); (c) have been misused, altered, modified or repaired without RISCO's written approval or combined with, or installed on products, or equipment of the customer or of any third party; (d) have been damaged by any factor beyond RISCO's reasonable control such as, but not limited to, power failure, electric power surges, or unsuitable third party components and the interaction of software therewith or (e) any failure or delay in the performance of the Product attributable to any means of communication provided by any third party service provider, including, but not limited to, GSM interruptions, lack of or internet outage and/or telephony failure. BATTERIES ARE EXPLICITLY EXCLUDED FROM THE WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY APPLICABLE THERETO, IF ANY, IS THE BATTERY MANUFACTURER'S WARRANTY. RISCO does not install or integrate the Product in the end user's security system and is therefore not responsible for and cannot guarantee the performance of the end user's security system which uses the Product or which the Product is a component of.

This Limited Warranty applies only to Products manufactured by or for RISCO. Further, this Limited Warranty does not apply to any software (including operating system) added to or provided with the Products or any third-party software, even if packaged or sold with the RISCO Product. Manufacturers, suppliers, or third parties other than RISCO may provide their own warranties, but RISCO, to the extent permitted by law and except as otherwise specifically set forth herein, provides its Products "AS IS". Software and applications distributed or made available by RISCO in conjunction with the Product (with or without the RISCO brand), including, but not limited to system software, as well as P2P services or any other service made available by RISCO in relation to the Product, are not covered under this Limited Warranty. Refer to the Terms of Service at: <https://riscocloud.com/ELAS/WebUI/UserLogin/License> for details of your rights and obligations with respect to the use of such applications, software or any service. RISCO does not represent that the Product may not be compromised or circumvented; that the Product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce the risk of a burglary, robbery or fire without warning, but it is not insurance or a guarantee that such will not occur or will not cause or lead to personal injury or property loss. CONSEQUENTLY, RISCO SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON ANY CLAIM AT ALL INCLUDING A CLAIM THAT THE PRODUCT FAILED TO GIVE WARNING.

EXCEPT FOR THE WARRANTIES SET FORTH HEREIN, RISCO AND ITS LICENSORS HEREBY DISCLAIM ALL EXPRESS, IMPLIED OR STATUTORY, REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS WITH REGARD TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE EXTENT PERMITTED BY LAW. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, RISCO AND ITS LICENSORS DO NOT REPRESENT OR WARRANT THAT: (I) THE OPERATION OR USE OF THE PRODUCT WILL BE TIMELY, SECURE, UNINTERRUPTED OR ERROR-FREE; (II) THAT ANY FILES, CONTENT OR INFORMATION OF ANY KIND THAT MAY BE ACCESSED THROUGH THE PRODUCT SHALL REMAIN SECURED OR NON-DAMAGED. CUSTOMER ACKNOWLEDGES THAT NEITHER RISCO NOR ITS LICENSORS CONTROL THE TRANSFER OF DATA OVER COMMUNICATIONS FACILITIES, INCLUDING THE INTERNET, GSM OR OTHER MEANS OF COMMUNICATIONS AND THAT RISCO'S PRODUCTS, MAY BE SUBJECT TO LIMITATIONS, DELAYS, AND OTHER PROBLEMS INHERENT IN THE USE OF SUCH MEANS OF COMMUNICATIONS. RISCO IS NOT RESPONSIBLE FOR ANY DELAYS, DELIVERY FAILURES, OR OTHER DAMAGE RESULTING FROM SUCH PROBLEMS. RISCO WARRANTS THAT ITS PRODUCTS DO NOT, TO THE BEST OF ITS KNOWLEDGE, INFRINGE UPON ANY PATENT, COPYRIGHT, TRADEMARK, TRADE SECRET OR OTHER INTELLECTUAL PROPERTY RIGHT IN ANY EVENT RISCO SHALL NOT BE LIABLE FOR ANY AMOUNTS REPRESENTING LOST REVENUES OR PROFITS, PUNITIVE DAMAGES, OR FOR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF THEY WERE FORESEEABLE OR RISCO HAS BEEN INFORMED OF THEIR POTENTIAL.

© RISCO Group 09/2017

5IN2460 C